

# Wireless And IR Par Can With Battery


MJ-3915C



## User Manual

Thank you for choosing our LED wireless battery par light. For the sake of your safety, Please read and follow these instructions carefully and keep this manual in a safe place for future reference.

## Remote Operation

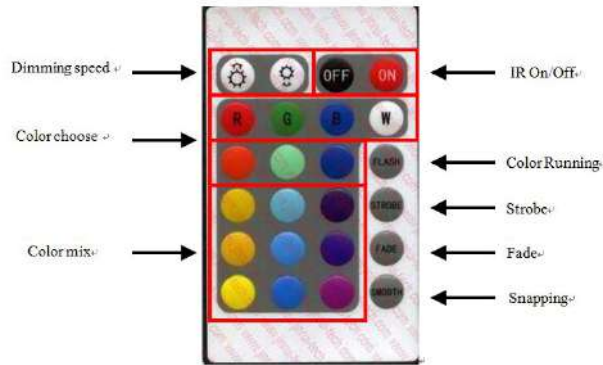

- Notes:**
1. Only use for remote use ----When you just need use remote control the light, you should be turn off the Wireless DMX.
  2. Wireless and Remote use----If you need use wireless DMX to do Master-slave function control by remote, you just need set one light do master, other light must be slave mode. use remote to control master light other light will be follow this light change.



## Charge Warning:

1. For carton box:  
**Please do NOT put in carton box while charging.**
2. For Flight case:  
**Please do NOT close the case while charging.**
3. For charge time:  
**Please do NOT charge over 10 hours.**

- ✧ Before open the LED par light and if you want to do the repair work, please make sure the power source is at the separation condition.
- ✧ Unceasingly carries on the product improvement about our company the policy, in this instruction booklet carries the data will have the possibility to be able to change in the future, when no longer separate notice change matters concerned. Our company retains when the product improvement changes the related specification the authority. This instruction booklet publisher cannot be responsible regarding this instruction booklet in information accuracy, also cannot the related consequence which causes regarding these information be responsible

**Most important: FIRST CHARGE THE FIXTURES FOR 6-8 Hours on the First Charge before use. Plug in Power cord. Turn off Power Switch and Turn on batter charge to charge.**

## Introduction

**Unpacking:** Thank you for purchasing this product, all products has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your fixture for any damage and be sure all accessories necessary to operate the unit has arrived intact. In the case damage has been found or parts are missing, please contact the manufacturer or your dealer for further instructions. Do not return this unit to your dealer without first contacting.

**Introduction:** The Light is a DMX intelligent and battery powered LED par light. This par light is light weight and compact which makes it a great piece for mobile DJ" s and clubs.

**Warning!** To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

**Caution!** There are no user serviceable parts inside this unit. Do not attempt any repairs yourself; doing so will void your manufactures warranty. In the unlikely event your unit may require service please contact the manufacturer or your dealer.

**PLEASE recycle the shipping carton whenever possible.**

## General Instructions

To optimize the performance of this product, please read these operating instructions carefully to familiarize you with the basic operations of this unit. These instructions contain important safety information regarding the use and maintenance of this unit. Please keep this manual with the unit, for future reference.

**Notice :please pay attention to ventilation, to prevent the battery overheat cause burning When charging.**



## Features

- Power supply: AC100V-240V
- Frequency: 50-60Hz
- Power consumption: 162W
- Light source: 9pcs 18W high brightness 6 in 1 leds
- Lamp life: 6-10 ten thousand hrs
- LED angle: 30(±5) degree
- Color: 16.7 million kinds of color change
- Control channels: 6/10 CH
- Battery power & wireless DMX
- Wireless DMX-512 protocol
- Built in 2.4G receiver/ transmitter for wireless DMX operations
- Control mode: DMX512, master/slave, auto, sound active (can order wireless DMX512 also)
- Automatic model(by function button) : color change, color strobe, color dimmer, color gradual change/color jump change
- Operation menu: 4 digit digital LED display
- Packing size: 265\*165\*275mm
- N.W: 3.8kg
- G.W: 4.5kg

## Safety Precautions

- To reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.
- Do not spill water or other liquids into or on to your unit.
- Be sure that the local power outlet match that of the required voltage for your unit.
- Do not attempt to operate this unit if the power cord has been frayed or broken. Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- Disconnect from main power before making any type of connection.
- Do not remove the cover under any conditions. There are no user serviceable parts inside.
- Never operate this unit when it's cover is removed.
- Never plug this unit in to a dimmer pack.
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Do not attempt to operate this unit, if it becomes damaged.
- This unit is intended for indoor use only; use of this product outdoors voids all warranties.

## Tip for the battery and charge:

- The battery can last for 3-4 hours when all LEDs on after full charge , and can last for more than 8-10 hours on auto running mode. Up to12 Hours with one color diode on. Results will vary based on brightness of LEDs
- It is suggested to charge the battery for at least 4 hours, which will extend the life span of the battery.

## For Battery Function and Charge

The unit has the function of battery powered. The button for battery and charge is set on the rear panel. It is showed as the following picture, and the function is described as below.



- |                         |                 |                |
|-------------------------|-----------------|----------------|
| 1. Batter charge On/Off | 2. DMX LED      | 3. LCD display |
| 4. Menu switch          | 5. Power LED    | 6. Power LED   |
| 7. ID code selector     | 8. Wireless LED | 9. Battery LED |



- |                    |                   |
|--------------------|-------------------|
| 10. DMX-Out socket | 11. DMX-In socket |
| 12. Power out      | 13. Power in      |

CH6	0	No function	No function
	1-255	Purple dimmer	White dimmer
CH7	0		No function
	1-255		Amber dimmer
CH8	0		No function
	1-255		Purple dimmer
CH9	0-9		No function
	10-29		Mixing color
	30-49		Color running
	50-69		Color fade
	70-89		Color mutation
	90-109		Color strobe+red
	110-129		Color strobe + green
	130-149		Color strobe + blue
	150-169		Color strobe+amber
	170-189		Color strobe+purple
	190-209		No function
	210-229		Sound-control-1
	230-249		Sound-control-2
250-255		Sound-control-3	
CH10	0		
	1-255		

There are two buttons on the rear panel of the lighting. One is for power, and the other is for signal.

- When use the fixture with DMX, not wireless, please switch the signal button for “off”
- When use the wireless DMX, please switch the button for “on”
- When charge the light, please switch both of the button for “of”. At the same time, if the switch for power is “on”, the light will be at work during the process of charge, but will consume some power from the charge; if the switch for power is “off”, the light will be blackout and not be at work.

- During long periods of non-use, disconnect the unit’s main power.
- Always mount this unit in safe and stable matter.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the point they exit from unit.
- Cleaning -The fixture should be cleaned only as recommended by the manufacturer. See “Cleaning” for details.
- Heat -The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- The fixture should be serviced by qualified service personnel when:
  - A. The power-supply cord or the plug has been damaged.
  - B. Objects have fallen, or liquid has been spilled into the appliance.
  - C. The appliance has been exposed to rain or water.
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance
- Fuse standard is 2A/250V
- Grounded using yellow/green line
- The ambient temperature must always be under +35° C

### Set Up

**Power Supply:** Before plugging your unit in, be sure the source voltage in your area matches the required voltage for your light is workable in 100-220V/50~60Hz. Because line voltage may vary from venue to venue, you should be sure your unit voltage matches the wall outlet voltage before attempting to operate you fixture.

### Operating Instructions

Operating Modes: You can use the light in 5 ways:

- Sound activation – The unit will activated by the sound signal.
- Static display – The unit will display the color in static way.
- Auto Mode -The unit will automatically chase through the different patterns.
- DMX control mode -This function will allow you to control the lighting with a standard DMX 512 controller.
- Battery powered – This function will allow you to control the lighting independently without any DMX cable

**DMX Mode:** Operating through a DMX controller give the user the freedom to create their own programs tailored to their own individual needs. This function also allows you to use your fixtures as pattern changing lights.

 
1. This function will allow you to control each individual fixtures traits with a standard DMX 512 controller.
2. The light use 6/10 DMX channels to operate. Please see “DMX channel and Functions” for the DMX traits.
3. To run your fixture in DMX mode, plug in the fixture via the XLR connections to any standard DMX controller. Set your desired DMX address following the setup specifications that come with your DMX controller.
4. The unit can automatically recognize the DMX signal once the DMX connection is done.

### DMX Linking:

To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

### Touch Buttons instruction:

There are four touch buttons under the LED Alpha-numerical display: Menu, Down, Up, Enter. Normally, the LED will display the current DMX address code of the fixture. At this time, presses Menu to choose the function you want to set up. Press and hold Up or Down to fast scrolling within the menu options. When an options flashing the LED display, press Enter to confirm and Menu to exit.



### Menu display function

Mode options ↓	User setting ↓	System settings ↓	Informations ↓
Static color option	Chennel setting	Color balance setting	LED temperature
Red 0-255	6CH / 10CH	Red 0-255	°C
Green 0-255	DMX address setting	Green 0-255	PCB temperature
Blue 0-255		Blue 0-255	
White 0-255	A:000-512	White 0-255	Working time
Yellow 0-255	Slave mode setting	Amber 0-255	
Purple 0-255		Purple 0-255	
Strobe 0-255			0000H

		Software version
	Battery icon view	V:1.0
Macro-color option	ON	
C:000-032	OFF	
Auto-mode	Backlight setting	
1.Color Changing	ON	
Speed:000-020	Five second	
2.Color Fade	Ten second	
Speed:000-020	Fifteen second	
3.Color Break	Autolock setting	
Speed:000-020	Off	
4. strobe-1	ON	
Speed:000-020	Language setting	
5. strobe-2	简体中文 (Chinese)	
Speed:000-020	English	
6. strobe-3	Fan control setting	
Speed:000-020	Automatic	
7. strobe-4	High-speed	
Speed:000-020	Medium-speed	
	Low-speed	
Sound mode	Infrared Settings:	
1.Sound-1	Off	
sensitivity0-100	ON	
2.Sound-2	Wireless setting:	
sensitivity0-100	Off	
3.Sound-3	ON	
sensitivity0-100	Factory Reset:	
	( ← → )	

### DMX channel

Channel	Value	Function	
		6CH	10CH
CH1	0	No function	No function
	1-255	Red dimmer	Main Dimmer
CH2	0	No function	No function
	1-255	Green dimmer	Strobe
CH3	0	No function	No function
	1-255	Blue dimmer	Red dimmer
CH4	0	No function	No function
	1-255	White dimmer	Green dimmer
CH5	0	No function	No function
	1-255	Amber dimmer	Blue dimmer